

Installation Speaker

WS-15T/30T/50T/80T



► WS-15T ► WS-30T ► WS-50T ► WS-80T

FEATURES

- High-quality Trans for Low/High
- Water and damp-proof of IP54
- Designed to Minimize Sound Distortion
- Consolidated Transmission of Low-pitched Sound
- Aesthetic Design
- Ease of Installation
- EASE, EASE Focus Data

SPECIFICATIONS


Model		WS-15T	WS-30T	WS-50T	WS-80T
Unit		2.5"	4"	5"	6.5"
Power Handling (AES)		15W	30W	50W	80W
Input Power	100V	15W	30W/15W	50W/25W	80W/40W
	70V	-	-	-	-
Impedance	100V	660Ω	330Ω/660Ω	200Ω/400Ω	125Ω/250Ω
	70V	-	-	-	-
	LOW	8Ω	8Ω	8Ω	8Ω
Frequency Range (-20%)		111Hz ~ 20kHz	83Hz ~ 20kHz	69Hz ~ 20kHz	60Hz ~ 20kHz
Sensitivity (1W/1m)		79dB	84dB	87dB	86dB
Maximum SPL [Cont]		90dB	95dB	104dB	105dB
Nominal Dispersion (HxV)	1kHz	173°x159°	156°x144°	195°x188°	150°x161°
	4kHz	102°x99°	98°x32°	94°x78°	62°x22°
Weight (Net)		0.89kg / 1.96lb	1.68kg / 3.70lb	2.34kg / 5.15lb	3.58kg / 7.89lb
Dimensions (Net, WxHxD)		92x120x114mm 3.6x4.7x4.5in	139x210x129mm 5.5x8.3x5.1in	173x250x150mm 6.8x9.8x5.9in	210x311x169mm 8.3x12.2x6.7in

* Design and specification are subject to be changed for the improvement of product quality without pre notice.


* When using high impedance, do not convert to 8Ω . It may cause an outbreak of fire due to overvoltage pressure.

FREQUENCY RESPONSE


► WS-15T

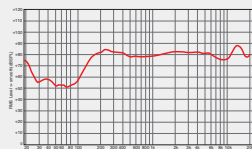


► WS-30T

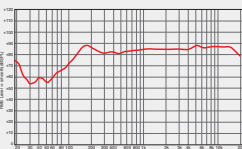

► WS-50T

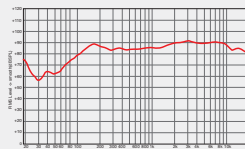


► WS-80T

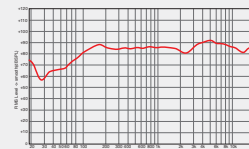


DIMENSIONAL


► WS-15T

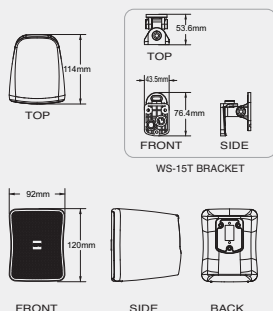

► WS-30T

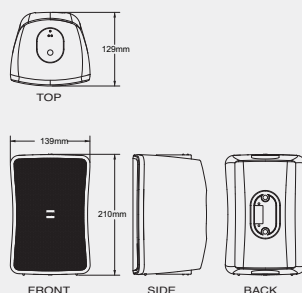

► WS-50T



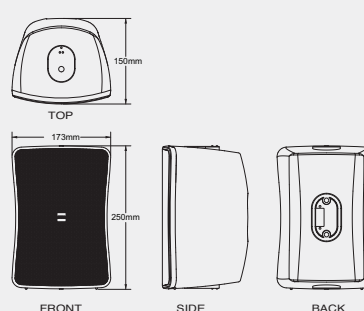


WS-15T/30T/50T/80T




DIMENSIONAL

► WS-80T

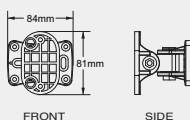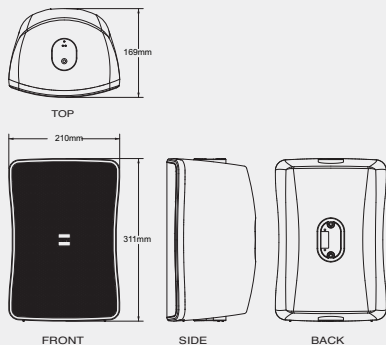


KNUCKLE BRACKET
(WS-30T/WS-50T/WS-80T)

► WS-30T

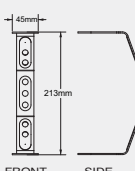


► WS-50T

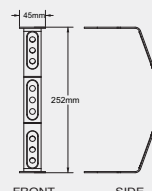


U-BRACKET

► WS-80T

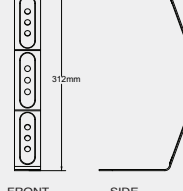


U-BRACKET INSTALLATION


► WS-30T/WS-50T/WS-80T

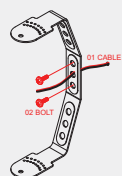


STEP 01

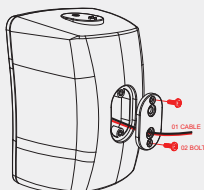

STEP 02

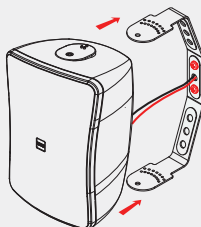

STEP 03

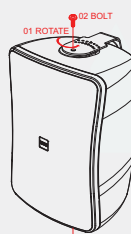

STEP 04




STEP 05

KNUCKLE BRACKET INSTALLATION


► WS-15T




STEP 01

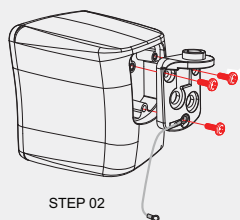

STEP 02

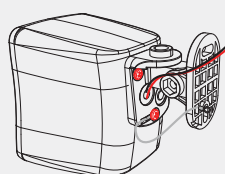

STEP 03

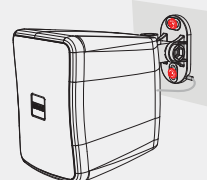


STEP 04


► WS-30T/WS-50T/WS-80T




STEP 01

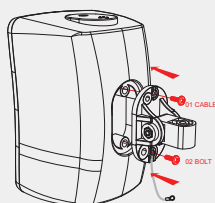


STEP 02

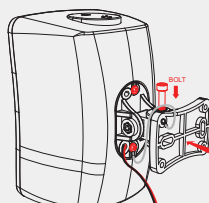

STEP 03

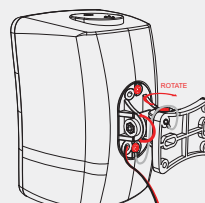

STEP 04

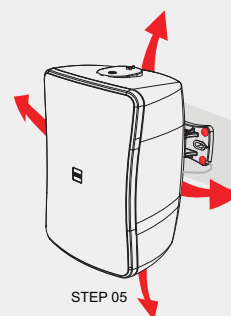

STEP 05

* When you install outdoor, Please install by inserting the waterproof back-gasket.

Inter-M Corporation

- Office : 719, DOBONG-RO, DOBONG-GU, SEOUL, KOREA
- Tel : +82-2-2289-8140~8, Fax : +82-2-2289-8149
- Home page: <http://www.inter-m.com>, E-mail: overseas@inter-m.com

Inter-M Corp. (IMA)

- Office : 5666 CORPORATE AVE. CYPRESS, CA 90630
- Tel : +1-714-828-2200, Fax : +1-714-828-2210
- E-mail : info@inter-m.net, Home Page : www.inter-m.net